


STOP!! Read all directions completely before beginning. If you do not feel confident with your ability to install this product, contact a dealer or qualified technican to install it for you.

- Carefully remove seat and tank according to owners manual.
 Once those parts have been removed, you will disconnect and discard the stock ground strap. (Figure #1)
- Now that the OEM strap is removed you need to locate the heavy starter cable connected at the starter motor. You are going to carefully route the new ground cable along the same path as that starter cable.
- Removal of zip tyes will be required with plastic trimming also needed on most models. Remove black plastic tray on subframe and allow it to hover without disconnecting wires. (Figure #2)
- 4. Take care to mold the wire with smooth curves and without kinks. Two stroke and four stroke models will require different mounting at the starter motor and routing in the battery area. (Figure #3)
- 5. Care must be taken to secure both starter and ground cables in the fashion that they are not in harms way. (Exhaust, seat mount contact, etc.)
- 6. The cable ends may need to be bent slightly on both ends to gain a tighter fit and improved clearance. DO NOT secure the rapid starter cable to the battery and push down. Damage to battery will occur. Use of a needle nose pliers works well. (Figure # 4)
- 7. After cable is installed, double check the fit and routing to ensure a quality installation. Test your work by tapping the start button.
- 8. Complete by properly installing the black tray, tank and seat.

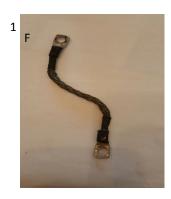







A better understanding: This product has been in use by LPS Riders for over 3 years without failure. The rapid start cable will NOT fix a starter problem with worn or damaged parts. It does however, provide a direct path back to the battery by reducing resistance caused by rust, corrosion, loose bolts and other problems that can occur over time. Benefits are: faster starting bike, reduced starter draw, extended battery life. Happier customers! This product is made with 100% American materials and labor.